# Software upgrade Description




APS5000 Software upgrade Description

### **Install Software**



### **PBms LV Tools**

After unzip, find and open the software PBms LVTools in the folder

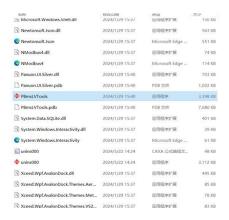


#### Switch of The Host Software

Check that the serial port switch of the host software is turned off.




## **BMS Upgrade Software**

Click on the Tools note. Click to open BMS upgrade V1.0.5.

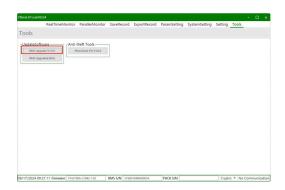

### Choosing the Language

Select english as the language.

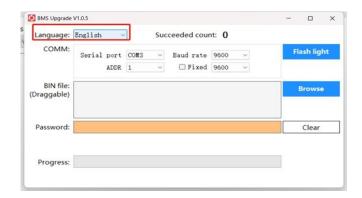


### **RS232 Communication**

Connect the battery to the computer using an RS232 communication box, Check the COM port and address information, Consistent with the DIP switch address of the monitored battery. The baud rate is 9600. Then click browse to query the local upgrade package.





### Local Upgrade Package

 Select the upgrade package, click OK, enter the upgrade password in the password box, and click Upgrade.(Please contact us for upgrade password.)



After the upgrade package is correct, click OK to start the upgrade. Do not power off or interrupt communication during the upgrade.

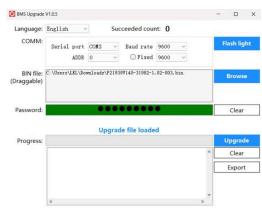

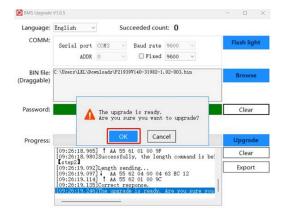

### **Contact Us**

**Email:** info@aesonpower.com.au **Website:** www.aesonpower.com.au

Phone: +61 3 9545 5993 Address: 63-67 Smeaton Avenue, Dandenong South VIC 3175